


**NATURAL SPACES CRAFT TROLLEY 90\*60\*60CM**  
**MODEL NUMBER: KB1-AZ12065-V01(DM4111)**

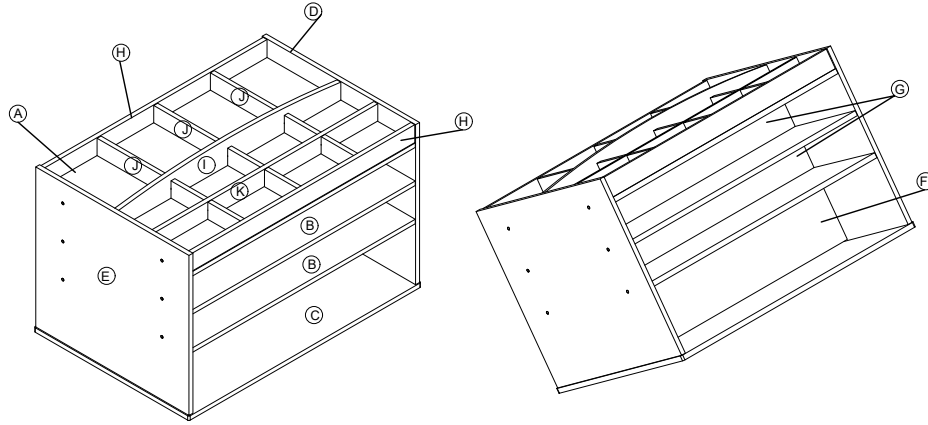

Thank you for your purchase of this furniture product. Please retain this sheet as a reference guide for care and maintenance guidance for your product.

**! WARNING:**


 
 
 


When unassembled, this package contains small parts, sharp points and edges. Adult assembly is required, and two adults are recommended. Do not stand, sit, kneel, climb on, or pull on the unit for support. Never leave children unattended with unit. Do not place unit near high heat or moisture. This product is intended for indoor use.



**Head office Australia**  
Level 1,122 -126 Old PittwaterRd  
Brookvale 2101 NSW  
PO Box 6367  
Frenchs Forest 2086 NSW  
Australia  
Freecall: 1800 251 497  
Freefax: 1800 151 492  
Email: sales@teaching.com.au  
[www.teaching.com.au](http://www.teaching.com.au)

**Head office New Zealand**  
PO Box 912001  
Victoria Street West  
Auckland 1142  
New Zealand  
Freecall: 0800 808 044  
Freefax: 0800 682 329  
Email: salles@teaching.co.nz  
[www.teaching.co.nz](http://www.teaching.co.nz)


**Parts and Hardware list** (note – frame components will be labelled with Letters (eg A) to assist in identifying correct part)

PART LIST		HARDWARE	
(A) X1	(D) X1		
(B) X2	(E) X1	Ø7*50 X36	Ø8*40 16
(C) X1	(F) X1		Ø8*60 4
(G) X2	(J) X3		
(H) X2	(K) X1	X2	X2
(I) X1			
		M4 X1	Ø5*16 X16

TIP!  
DO NOT FULLY  
TIGHTEN SCREWS  
UNTIL ALL SCREWS  
HAVE BEEN LOOSELY  
POSITIONED.

BEFORE  
ASSEMBLING,  
MAKE SURE THERE  
ARE NO  
MISSING PARTS.


ELECTRIC DRILLS MAY BE  
USED FOR ASSEMBLY. ENSURE  
APPROPRIATE SIZE DRILL BITS  
ARE USED, AND DRILL IS USED  
ON A SLOW AND LOW TORQUE  
SETTING

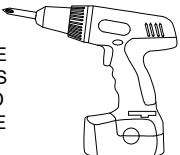


PART IDENTIFICATION-SCALE 1:1-PLACE PART OVER DRAWING TO CHECK CORRECT SIZE



 
WJ-JU-094  
Ø8\*60  
X4




WJ-JU-017  
Ø8\*40  
X16

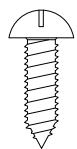 

WJ-LS-ZG-007  
X16


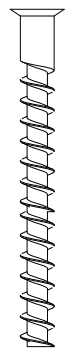 


WJ-LS-PT-028  
Ø7\*50  
X36

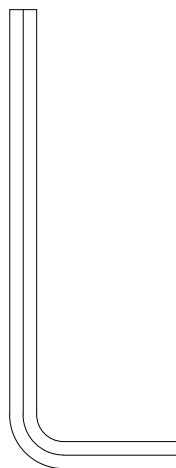

WJ-GJ-027  
M4  
X1

 
2

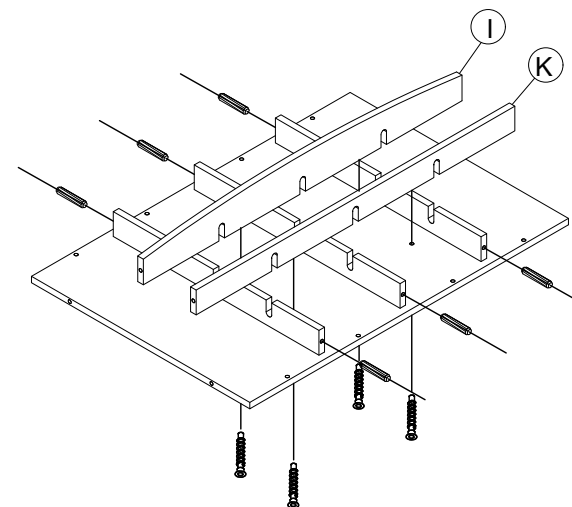


ASSEMBLY:

To avoid top scratching or damage, assembly should be done on top of a soft surface such as carpet, cardboard or a rug.

1

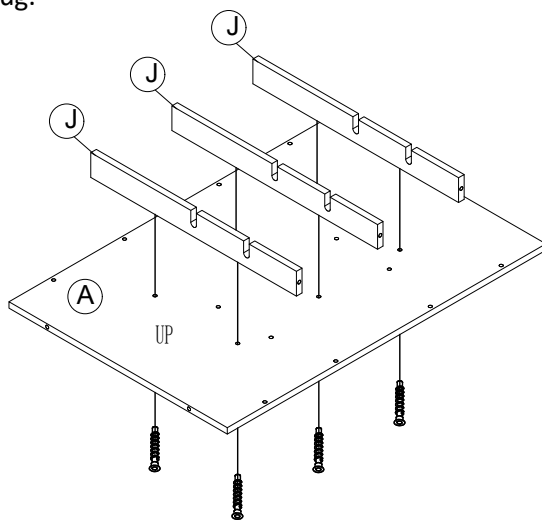


3

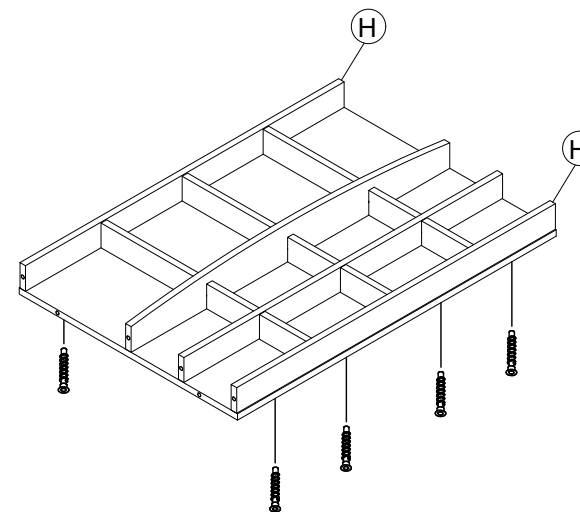


4

Ø7\*50 X4  
Ø8\*40 X8

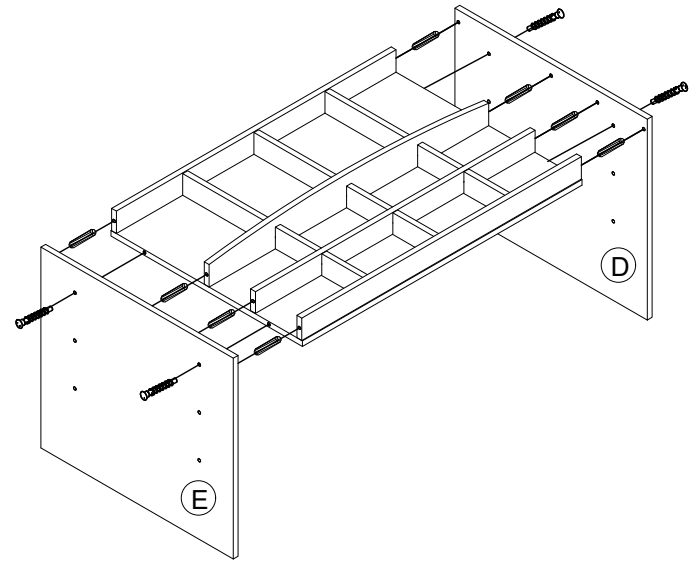


6

Ø8\*60 X2  
Ø7\*50 X4

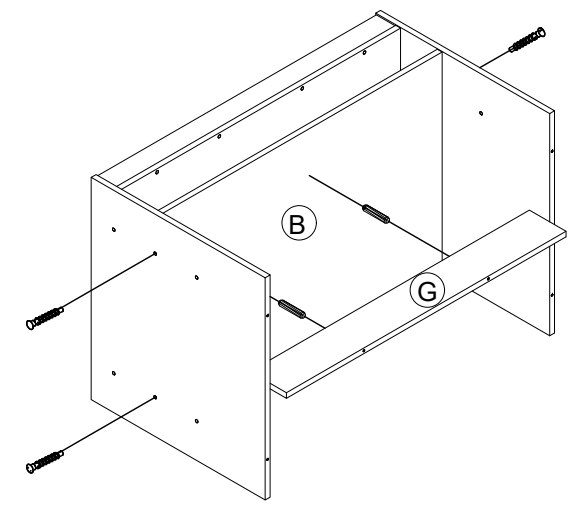


5

Ø8\*40 X2

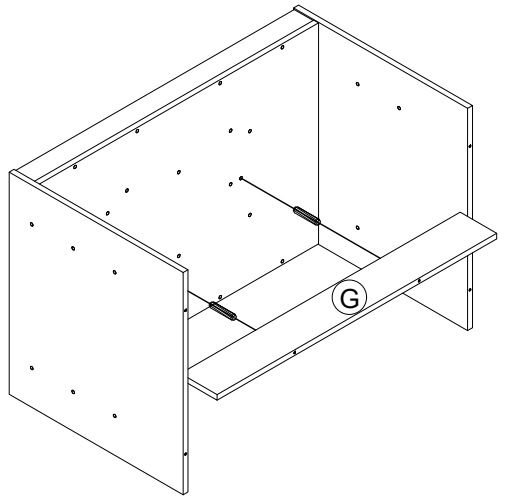


7

Ø7\*50 X4  
Ø8\*60 X2

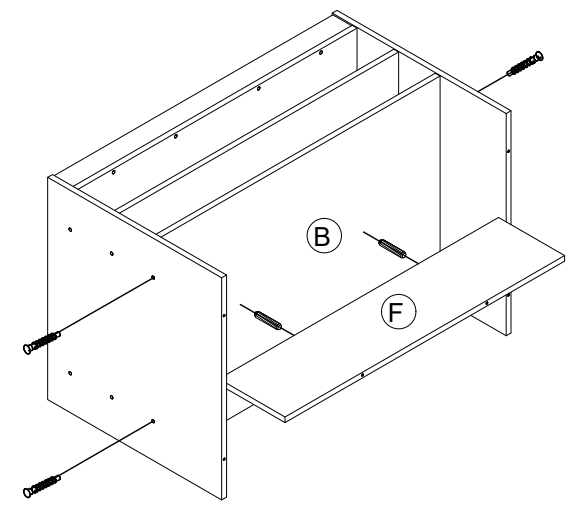

8

Ø7\*50  
X6

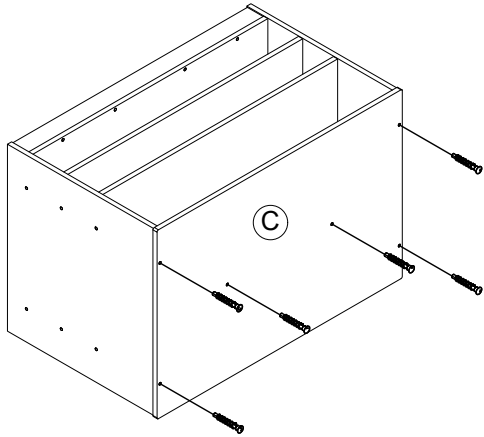

Note:

How to attach the optional small castors after (not included)


1.The front and back kick plate are not to be added if using the optional castors.

2. Ensure to place the lockable castors at the rear and the non-locking castors at the front.

3.The castors are not supplied with this item.


4.The small castors (DM4022) are available online on [www.teaching.com.au](http://www.teaching.com.au) or [www.teaching.com.nz](http://www.teaching.com.nz)

9-A

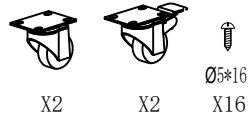

If assemble with the small castors, please attach where shown in drawing.

attach here

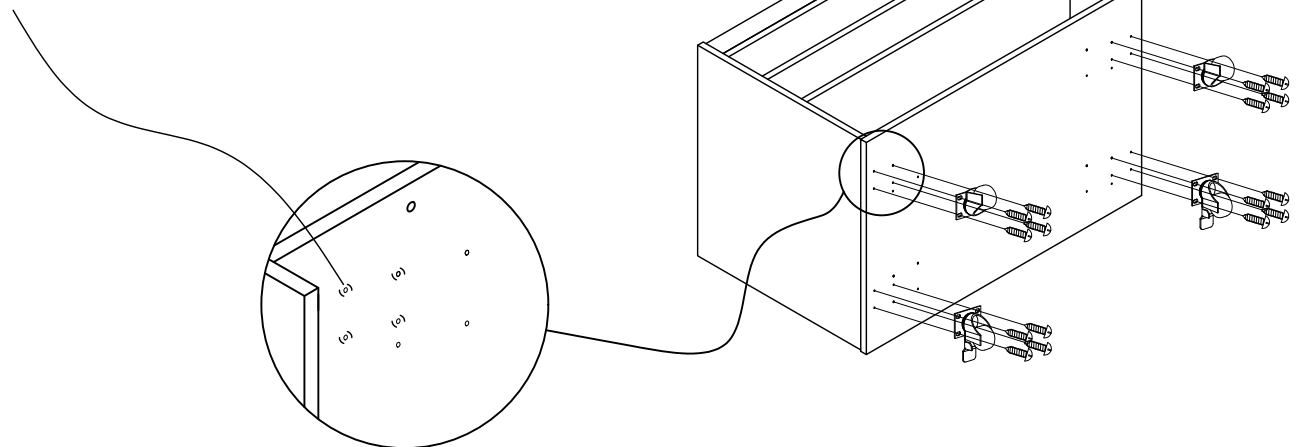


Note:

How to attach the optional large castors after (not included)

1. The front and back kick plate are not to be added if using the optional castors.
2. Ensure to place the lockable castors at the rear and the non-locking castors at the front.
3. The castors are not supplied with this item.
4. The large castors (DM023) are available online on [www.teaching.com.au](http://www.teaching.com.au) or [www.teaching.com.nz](http://www.teaching.com.nz)

If assemble with the large castors, please attach where shown in drawing.

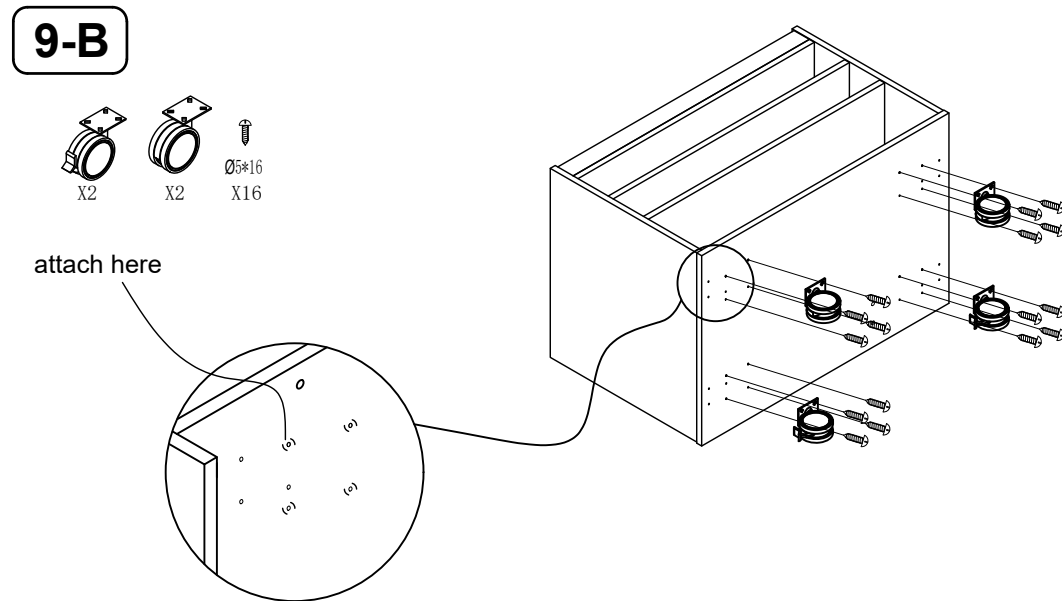

## CARE AND MAINTENANCE.

THIS PRODUCT IS DESIGNED FOR USE IN A CLASSROOM ENVIRONMENT. TO CARE FOR AND MAINTAIN YOUR PRODUCT:

- THE FRAME AND TIMBER CAN BE CLEANED USING A DAMP CLOTH OR SPONGE USING WARM WATER AND MILD SOAP. ALWAYS WIPE DRY THE FRAME IMMEDIATELY AFTER CLEANING.
- INSPECT THE FRAME FOR ANY SIGNS OF BREAKAGE OR DETERIORATION OF FRAME OR PARTS. DO NOT USE THE PRODUCT IF EXCESSIVE WEAR AND TEAR IS EVIDENT.
- THIS PRODUCT IS DESIGNED FOR USE IN A DRY INDOOR ENVIRONMENT. DO NOT LEAVE THE PRODUCT OUTSIDE.
- DO NOT ALLOW CHILDREN TO CLIMB ON THE PRODUCT.

## WARRANTY.

- THIS PRODUCT IS SUPPORTED BY A ONE YEAR MANUFACTURER'S WARRANTY AGAINST DEFECTS AND WORKMANSHIP FOR BOTH THE FRAME AND ANY ASSOCIATED PARTS. WITHIN THE WARRANTY PERIOD, THE MANUFACTURER WILL REPLACE OR REPAIR ANY DEFECTIVE PARTS FREE OF CHARGE.
- THIS WARRANTY PERIOD COMMENCES AT THE DATE OF PURCHASE OF THE PRODUCT BY THE ORIGINAL PURCHASER AND EXTENDS ONLY TO THE ORIGINAL PURCHASER.
- SHOULD THE ENTIRE PRODUCT OR ANY PARTS OF THE PRODUCT REQUIRE REPLACEMENT, WARRANTY ON THE REPLACEMENT PRODUCT OR PARTS ARE COVERED FOR A PERIOD OF 12 MONTHS FROM THE PURCHASE DATE OF THE ORIGINAL PRODUCT, NOT FROM THE DISPATCH DATE OF THE REPLACEMENT OF PRODUCT OR PARTS.
- THIS WARRANTY DOES NOT COVER DAMAGE CAUSED BY ABUSE, ABNORMAL OR IMPROPER USE.
- THIS WARRANTY DOES NOT COVER GENERAL WEAR, TEAR AND PRODUCT AGING, MISUSE OF THE PRODUCT, INCORRECT ASSEMBLY, IMPROPER MAINTENANCE OR ACTS OF GOD (SUCH AS DAMAGE CAUSED BY FLOODING).
- THIS PRODUCT COMES WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.